

Technical Manual IMPORTED

<u>Technical Manual</u>

Section	Page
Material	3-4
Panel Components	5-6
Colour Range	7
Measuring & Specifications	8-13
Frame Options	14
Louvre Clearance	15
T, Bay & Corner Post Locations	16-18
Layout Configuration (Hinged)	19-21
Track Systems	22-28
Shapes	29
Mount Types	30
Betta Poly & Betta Hybrid	31-34
Betta Basswood Components	35-38
Betta Paulownia Components	35-38
Clearances & Track Systems	39-52
Mid rails/Split tilt	53-56
Stiles	57
Fixed louvre	58
Hardware	59-60

Material

Good



Better



Betta Poly is an extruded material tested for your health containing no harmful phthalates and VOC levels well below Australian standards. Betta Poly is ideal for wet areas such as bathrooms, laundry, kitchens or where water is likely to come into contact with the material, including windows left open. An aluminium insert is used in the stiles, rail and louvres to increase strength and reduce weight. Betta Poly shutters are termite and fire resistant. Panels up to 880mm but if you are looking for wider panels, we have a great option in Betta Hybrid.

Betta Hybrid We combine the water-resistant properties of Betta Poly frames, rails and stiles and then timber louvres to give a light strong hybrid shutter. The timber used is Paulownia, which is a fast-growing timber species due to the propagation of existing root stock. Straight grained, light with a strong grain pattern, high strength to weight ratio and good dimensional stability. Paulownia has a natural resistance to insect damage and is the the best thermal insulating wood. Betta Hybrid panels can span 920mm.

Material

Best Best







Betta Paulownia Paulownia is a fast-growing and highly sustainable hardwood species. It is lightweight, yet durable, and has become popular for its strength, beautiful grain, and resistance to decay. Paulownia has great water-resistant qualities and a high strength to weight ratio.

Betta Basswood is made from 100% Basswood, which is a furniture grade hardwood. It is one of the most widely used materials for shutters in the global market, due to its resistance to warping, easy workability, durability, and its ability to be finished in a variety of colours and stains. Customise with shapes, tracking systems and custom colours. Woodland panels span up to 1000mm

Panel Components

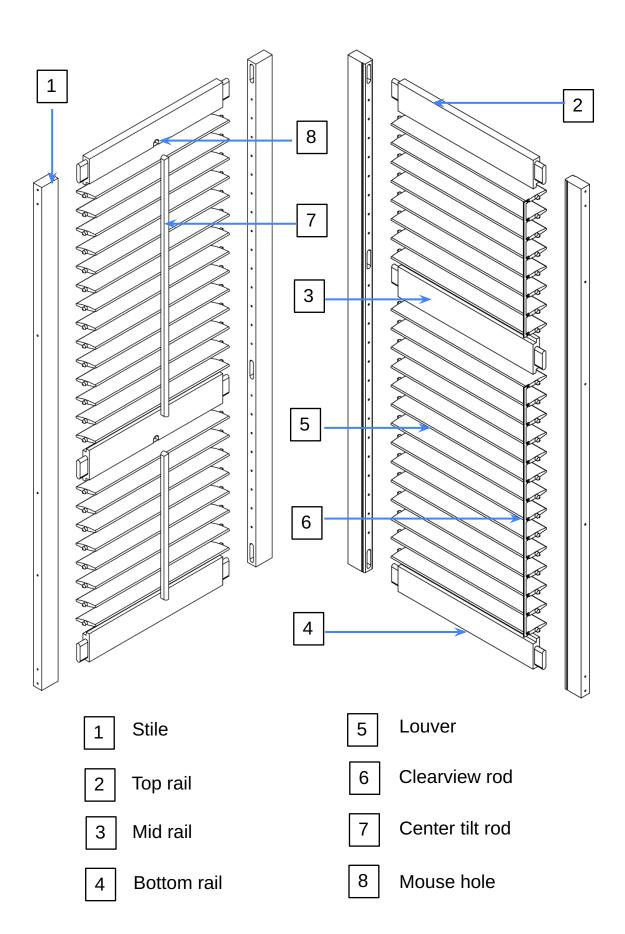

<u>Invisible Tilt</u>

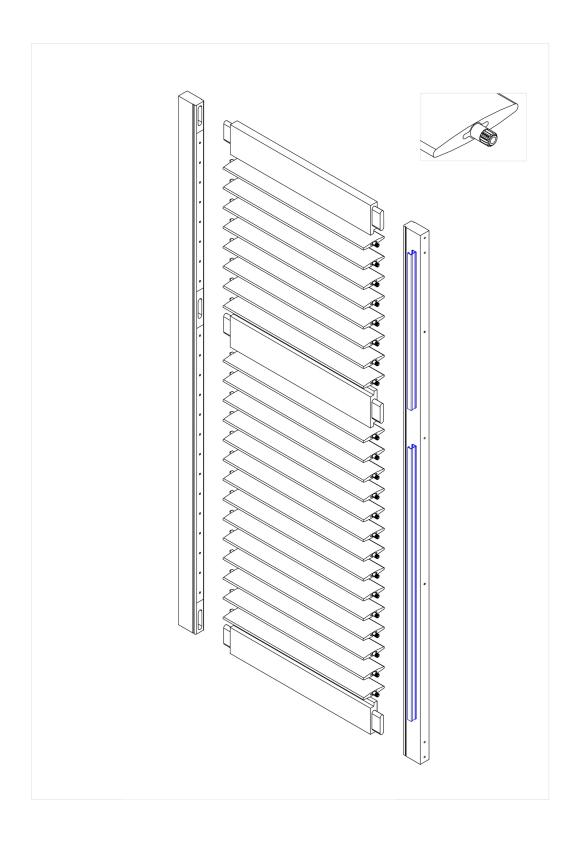

Polyurethane Paint

		Betta Basswood	
Betta Poly	Betta Hybrid	Betta Paulownia	Betta Poly Aussie Made
JM01 Pure White	JM01 Pure White	JM01 Pure White	
JM02 Love Note	JM02 Love Note	JM02 Love Note	
JM03 Super White	JM03 Super White	JM03 Super White	
JM04 China White	JM04 China White	JM04 China White	
JM05 Antique White	JM05 Antique White	JM05 Antique White	
JM201 Pure White			JM200 Betta White
JM202 Snow White			
JM203 Swan			
JM204 Bright White			
		JM06 Golden Oak	
		JM07 Natural	
		JM08 Cordovan	
		JM09 Walnut	
		JM10 Black	
		JM10 Black	

Colour Range

JM01-JM05: Standard paint (PU)
JM201-JM204: Water based paint

JM06-JM10: Stain

Specifications

			Betta Basswood /	
Material	Betta Poly	Betta Hybrid	Betta Paulownia	Betta Poly Australian Made
	Synthetic	Hybrid	Timber	Synthetic
Louvre size	64/89/114mm	64/89/114mm	64/89/114mm	89mm
Max single panel width	880mm	920mm	Paulownia 950mm Basswood 1000mm	880mm
	(64mm=750mm)			
Min. panel width	250mm	200mm	200mm	200mm
Max multi panel width	500mm	550mm	550mm	500mm
Max panel height	2700mm	3000mm	3000mm	2700mm
Min. panel height	300mm	250mm	250mm	300mm
Midrail required at	1800mm	1800mm	1800mm	1800mm
Max. 2nd divider rail		2700mm	2700mm	
Solid Panel	Yes	Yes	Yes	No
Special Shape	No	Yes	Yes	No
T Post	Yes	Yes	Yes	Yes
Bay/Corner Post	Yes	Yes	Yes	Infil
Rebate Stile	Yes	Yes	Yes	Yes
Frame and Post build out	Yes	Yes	Yes	No
Traditional front or offset tilt rod	Yes	Yes	Yes	No
INVISIBLE TILT	Yes	Yes	Yes	No
Clearview	Yes	Yes	Yes	Yes
Track Systems	Yes	Yes	Yes	Yes

 $^{^{\}ast}$ Aust Made we can make the panel size up to 900mm outside of warranty





Measuring Guide

Measurement Guide

Standard opening measurement:

Method: Measure top, middle and bottom of the opening width, while measure left, middle and right of the opening height.

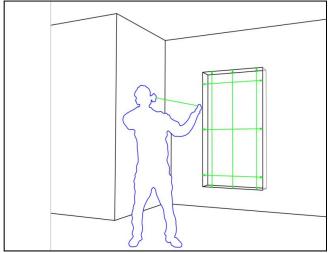

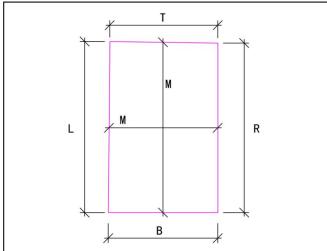

A. Inside Mount

Width=Take the smallest data among the three as width

Height=Take the smallest data among the three as height

Example(A):


top width=703 middle width=705 bottom width=707

left height=1107 middle height=1104 right height=1102

Result:

Width=703

Height=1102

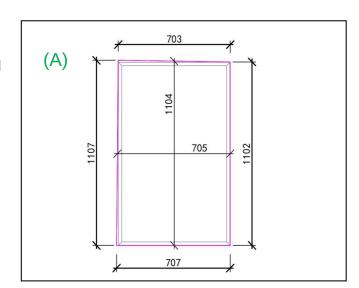

B. Outside Mount

Width:=Take the biggest data among the three as width

Height: Take the biggest data among the three as height

Example(B):

top width=703 middle width=705

bottom width=707


left height=1107 middle height=1104

right height=1102

Result:


Width=707

Height=1107

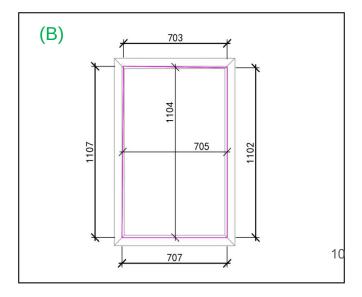

Measurement Guide

Special shaped opening measurement

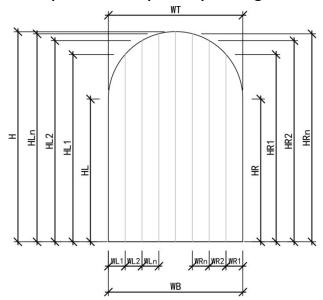


Arch:

Measurement points: See picture(left)
Measurement: Take WB/WT/H/HL/HR
WL1 match HL1,WL2 match HL2,WLn
match HLn

WR1 match HR1,WR2 match HR2,WRn match HRn

(Measurement points should be added supposed the opening is bigger or more special look)

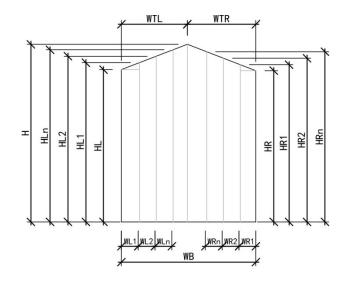

Triangle:

Measurement points: See picture(left)


Measurement: Take

WB/WTL/WTR/H/HL/HR

WL1 match HL1, WL2 match HL2, WLn match HLn

WR1 match HR1,WR2 match HR2,WRn match HRn

(Measurement points should be added supposed the opening is bigger or more special look)

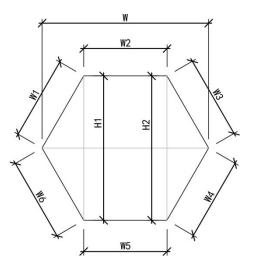

Hexagon:

Measurement points: See picture(left)

Measurement:

Take W/H1/H2/W1/W2/W3/W4/W5/W6


(Measurement points should be added supposed the opening is bigger or more special look)


Measurement Guide


Special shaped opening measurement


By template:

We require an exact copy of the opening profile via cardboard or other sheet. The template should be marked with all the related information, such as width, height, etc. Once the template is received, the factory will begin the production based on the template shape and size ASAP. Please note whether you require deductions to be made or not. The rest of the work will be carried out by the factory. Please allow extra posting time and allow for additional cost.

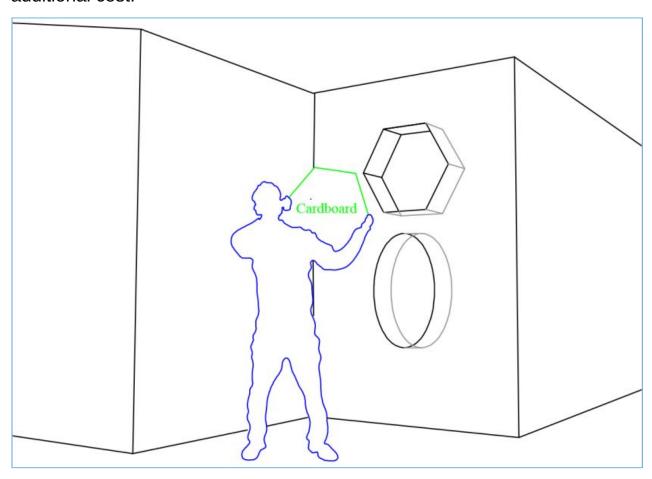

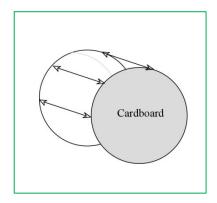


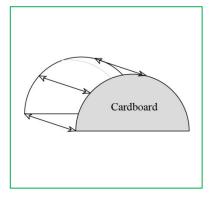


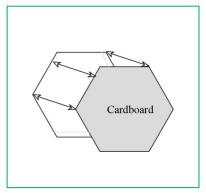


Frame Options

(Front view)

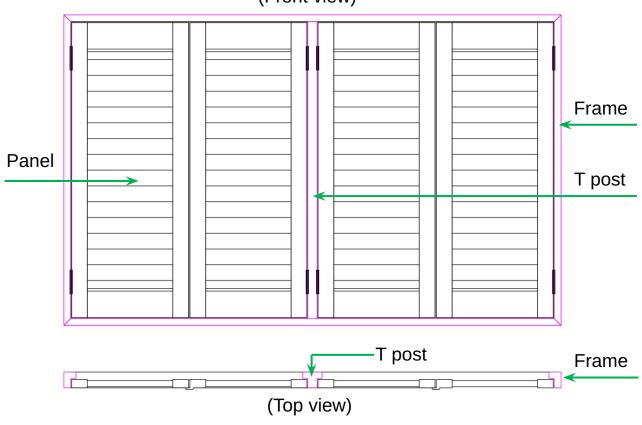

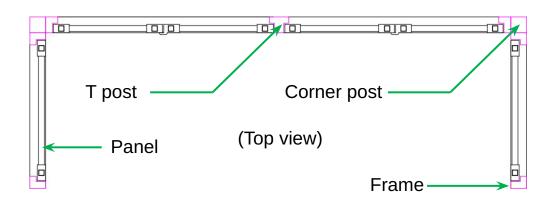


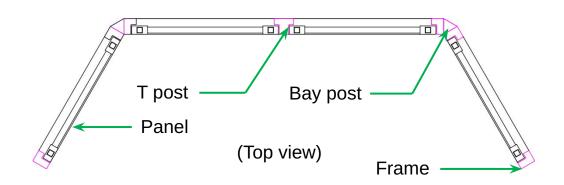


Frame Sides

L stands for left frame, R stands for right frame, T stands for top frame, B stands for bottom frame,


S stands for bottom closing batten, normally functioning as a bottom frame.

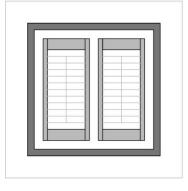


4LRTB (4 sides)

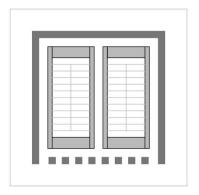


4LRTS (3 sides with bottom light block)

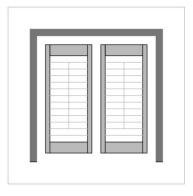


3LRT (no bottom frame)

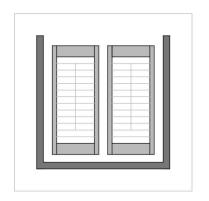

3LRB (no top frame)

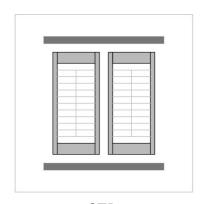

2TB (top & bottom frame)

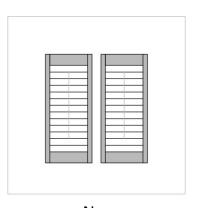


None (no frame)

Louvre Clearance

Louvre clearance (LC) means the Standard Depth required to make sure all the louvers fully open without touching any obstruction.


Factors that may influence security depth: depth of the opening, frame depth, Protruding depth of the handle, Louver size, Divider location, Rod split location etc.

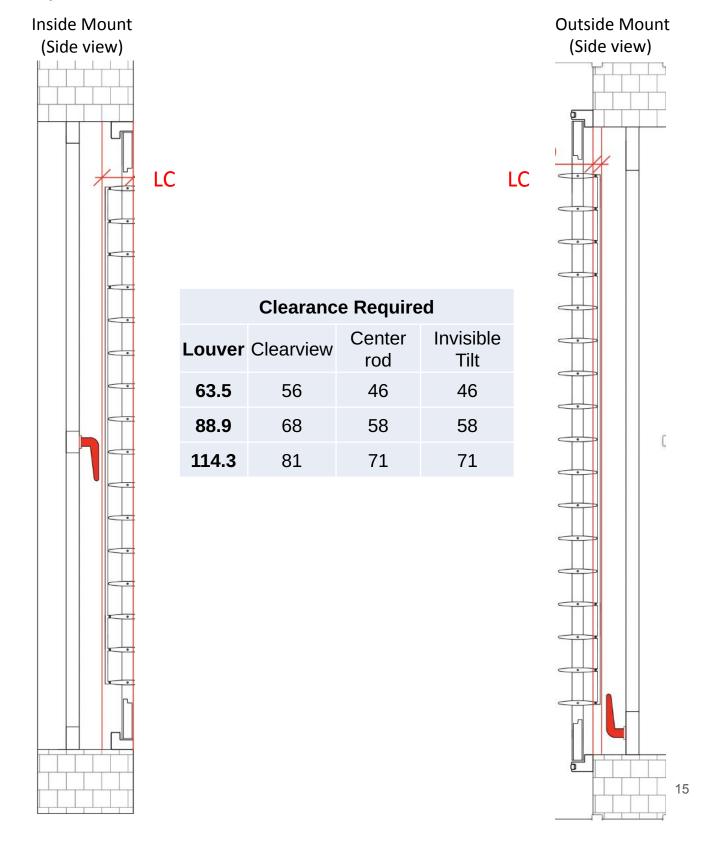


Measurement of T Posts

Inside mount: Measurement starts from the left of the opening to the center point of each T post.


Outside mount: Measurement starts form the left of the frame to the center point of each T post.

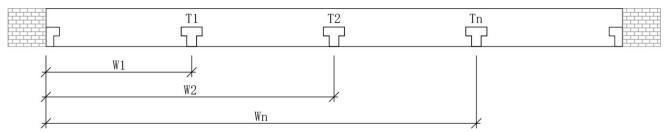

Inside mount of L frame: Measurement starts from the left of the opening to T1, T2, Tn, that is W1, W2, Wn.

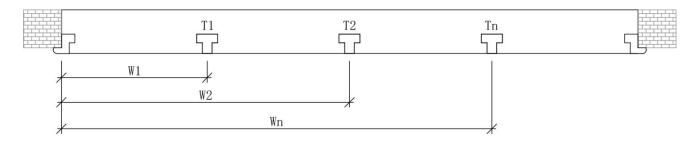


Inside mount of Z frame: Measurement starts from the left of the opening to T1, T2, Tn, that is W1, W2, Wn.

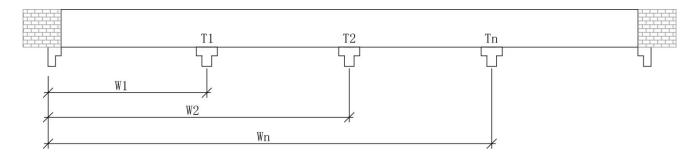


Outside mount of L frame: Measurement starts from the left of the frame to T1, T2, Tn, that is W1, W2, Wn.

Measurement of C Posts

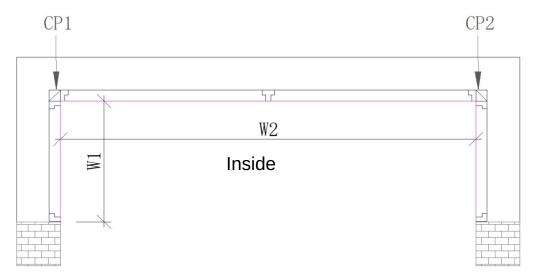


Measurement of corner post: When the mount type is "inside", it is measured from the left of the opening to the center point of each corner post. See CP1/CP2, that is W1+W2+W3. <u>The width provided on the order form is the sum of the three sides.</u>

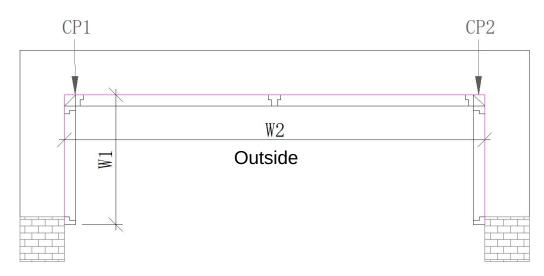


Measurement of corner post: When the mount type is "Outside", it is measured from the left of the frame to the center point of each corner post. See CP1/CP2, that is W1+W2+W3. The width provided on the order form is the sum of the three sides.

Measurement of B Posts

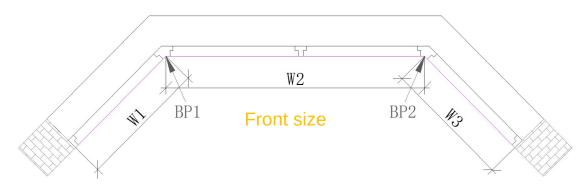

Measurement of bay post: When the mount type is "Inside", it is measured from the left of the opening to the center point of each bay post. See BP1/BP2. <u>The width provided on the order form is the sum of the three sides</u>, that is W1+W2+W3

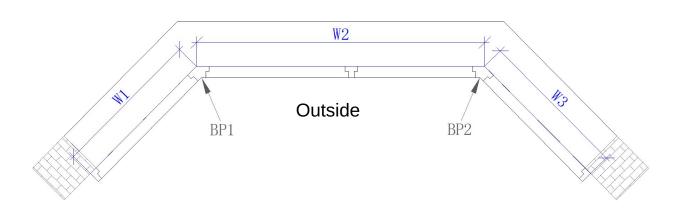

Measurement of bay post: When the mount type is "Outside", it is measured from the left of the frame to the center point of each bay post. See BP1/BP2. The width provided on the order form is the sum of the three sides, that is W1+W2+W3



Layout Configurations

Hinged Systems:

L = the panels are hinged on the left

R = the panels are hinged on the right

D = D-mould. e.g. L-DR (D Mould attached to right hand panel so right closes over left).

T = T Post. Always measured from the left to the centre of the post.

C = Corner post

 $\mathbf{B} = \mathbf{B}$ ay post

Bi-Fold Systems:

LL = Panel are stacking to the left. E.g. LL-RR (2 panels left, 2 panels right)


RR = Panels are stacking to the right

Sliding Systems:

B = Panel on Back track working from the left. E.g. BFB is Back, Front, Back

F = Panel on Front tracks working left to right

Layouts - Hinged

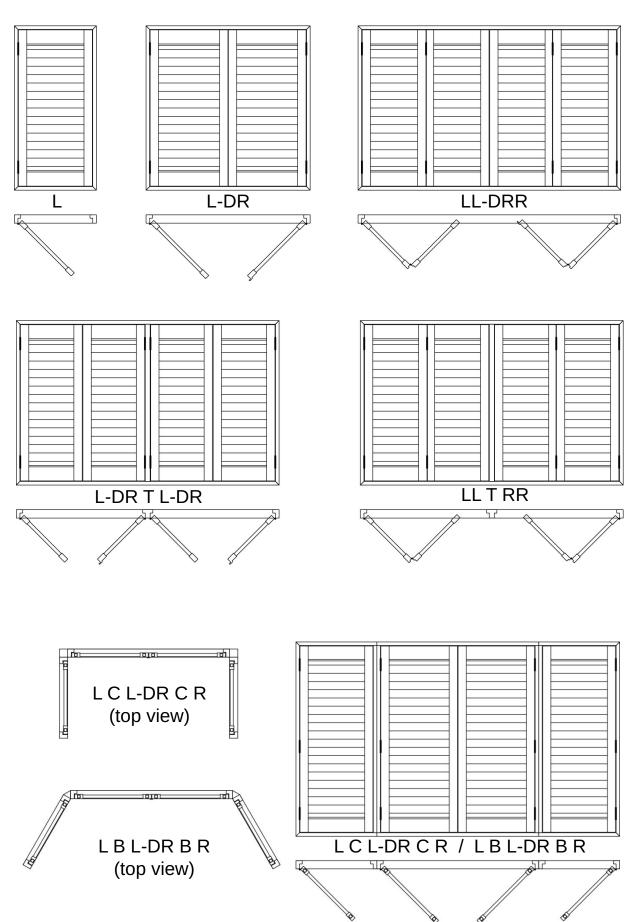

<u>Layouts - Tier on Tier</u>






Track Systems

New Product (Imported only)

Bottom roll system (BRS)

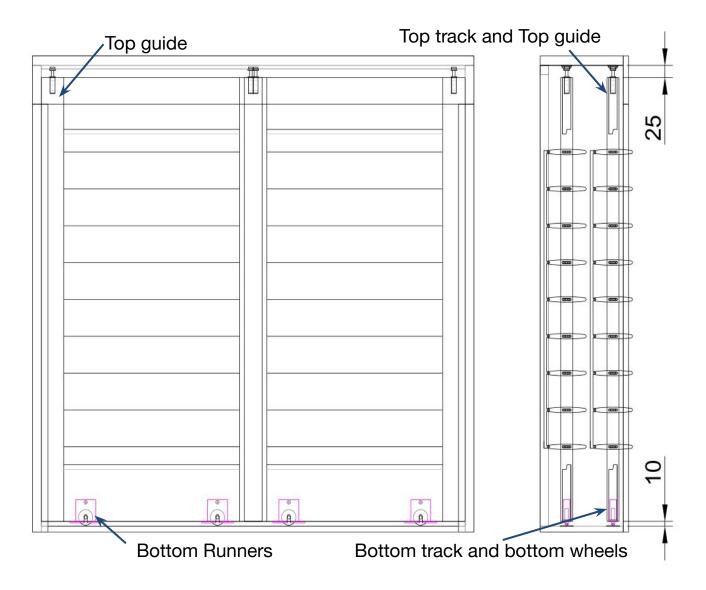

- 1. Using regular track frames,
 - 4 side can be used (4LRTB) track on bottom board
 - 3 sided Frame (3LRT) with track on the floor
- 2. Can be used as 2 tracks or 3 side tracks
- 3. Panel height = net height inside frame 35

New Product (Imported only)

Bottom roll system - Hardware



Top track



Top Guide





Bottom track



Bottom runner

Track components – Top Roller System (TRS)

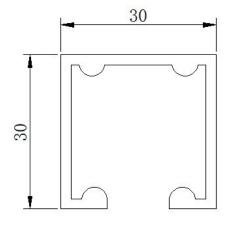

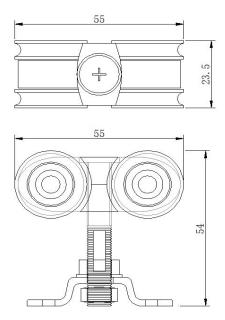











Track components – Top Roller System (TRS)






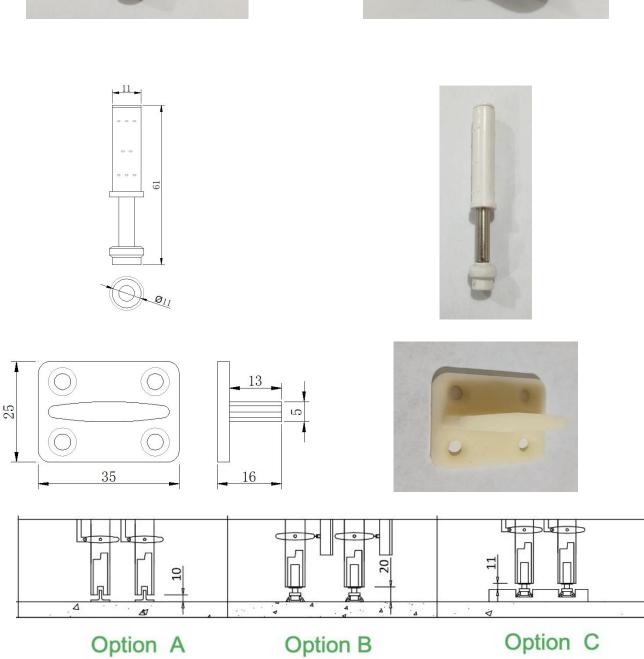


<u>Layouts - Bi-fold Track System</u>

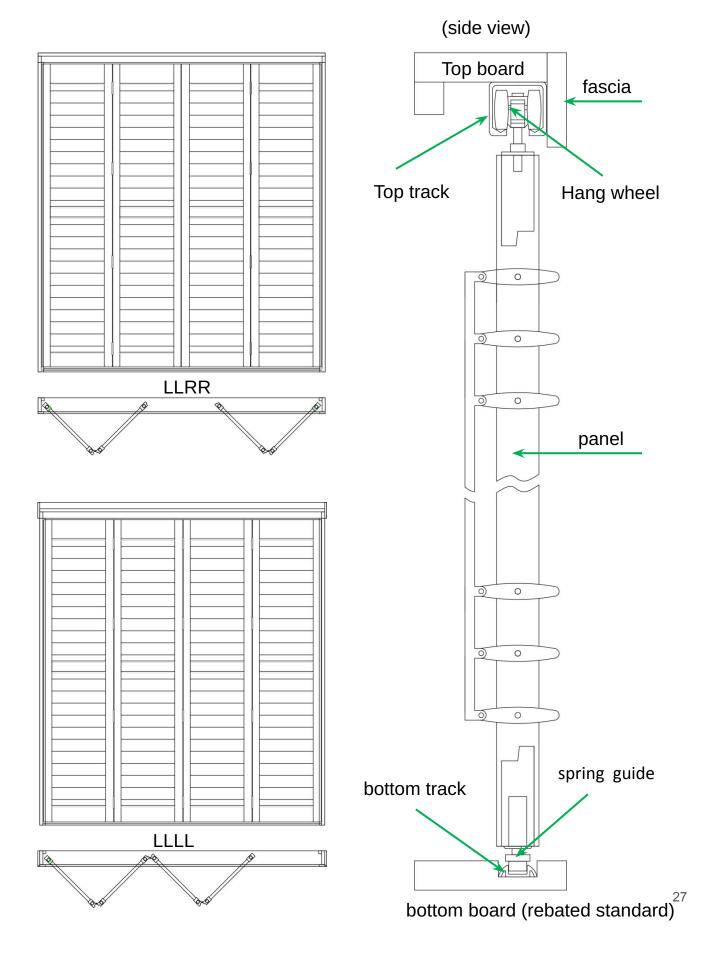


Layouts - Sliding Track System

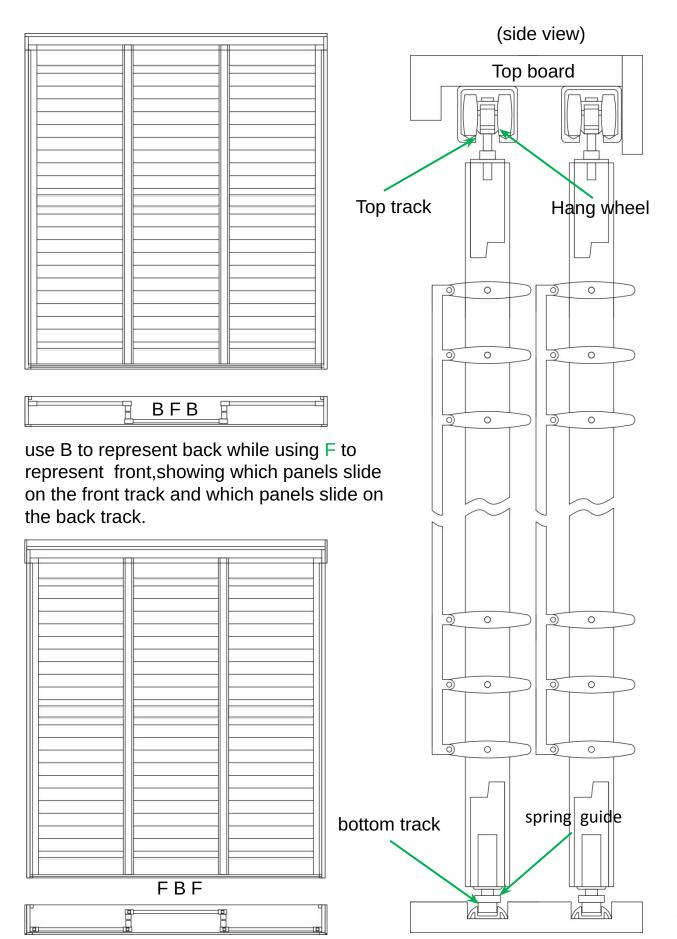

<u>Layouts - Special Shapes</u>

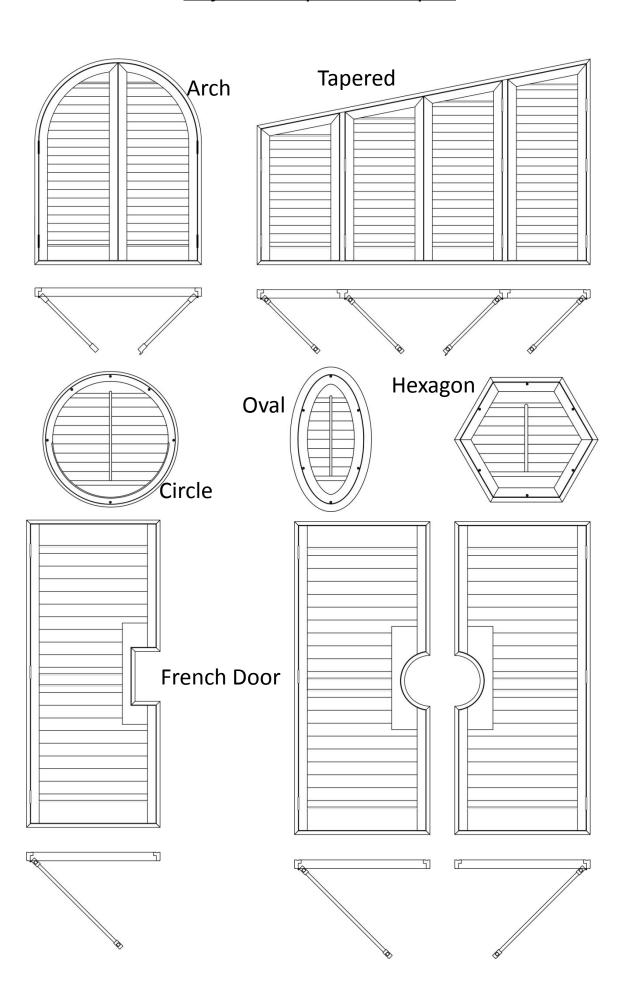

Mount Type

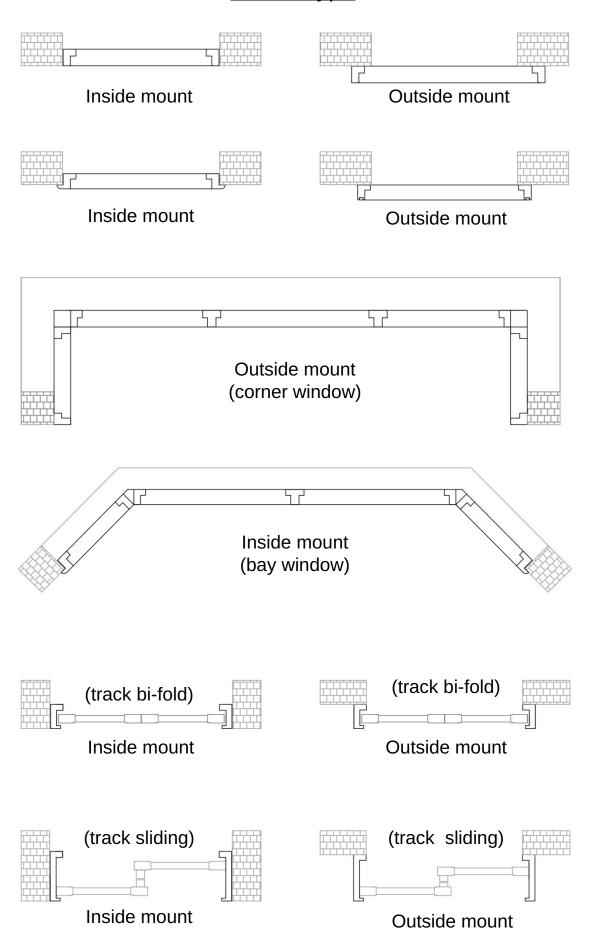



Betta Poly & Betta Hybrid Components

Timber Packers/Battens

Betta PVC Betta Hybrid Betta Basswood Betta Paulownia

19 x 19


Betta PVC Betta Hybrid Betta Basswood Betta Paulownia

30 x 30


Betta PVC Betta Hybrid Betta Basswood Betta Paulownia

20 x 8


Betta PVC Betta Hybrid Betta Basswood Betta Paulownia



Betta Poly Frames

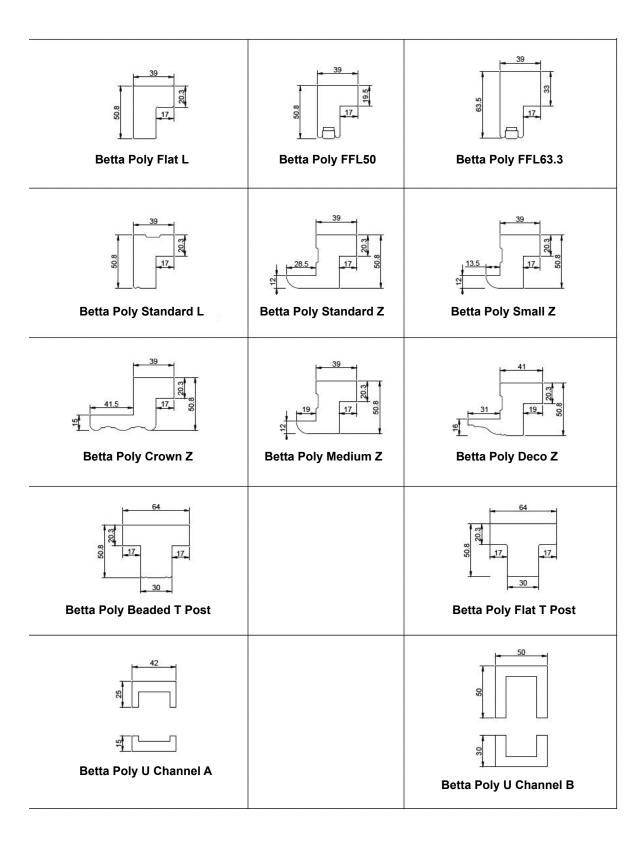


Betta Poly Stiles

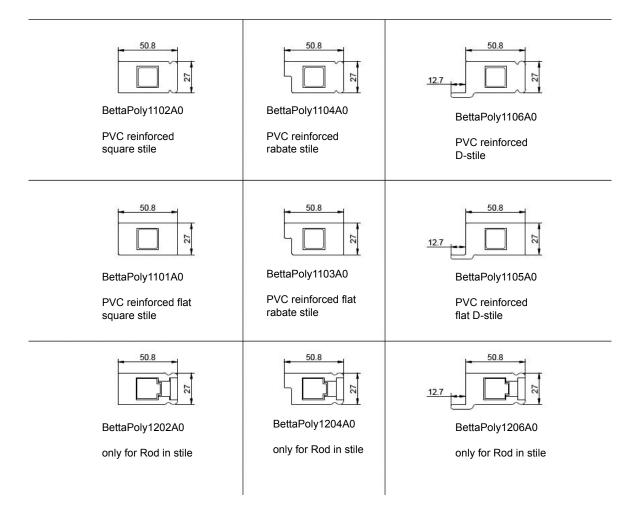


Components

Betta Poly Louvers

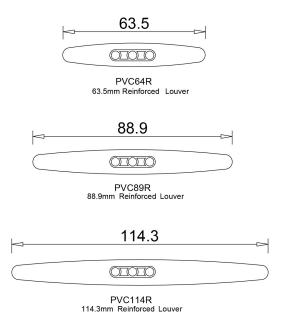

Betta Hybrid Louvers

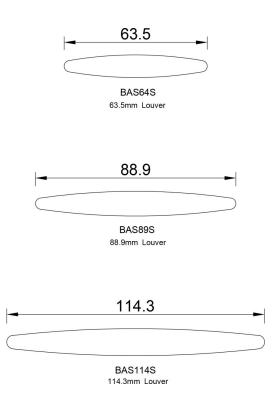





Betta Basswood & Betta Paulownia Components

Timber Packers/Battens


Betta PVC Betta Hybrid Betta Basswood Betta Paulownia




Betta PVC Betta Hybrid Betta Basswood Betta Paulownia

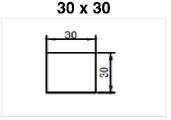


Betta PVC Betta Hybrid Betta Basswood Betta Paulownia




Betta PVC Betta Hybrid Betta Basswood Betta Paulownia




Betta Basswood Frame

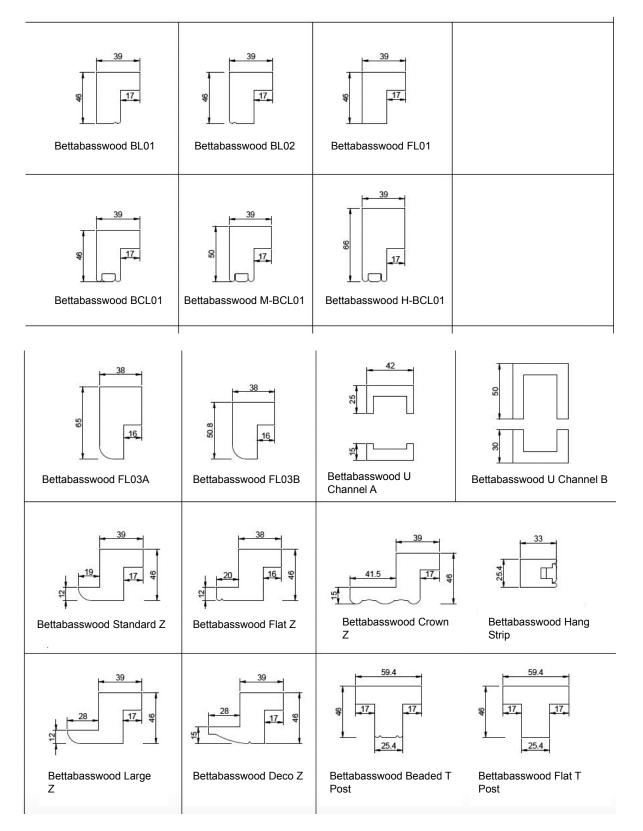


Paulownia Frame

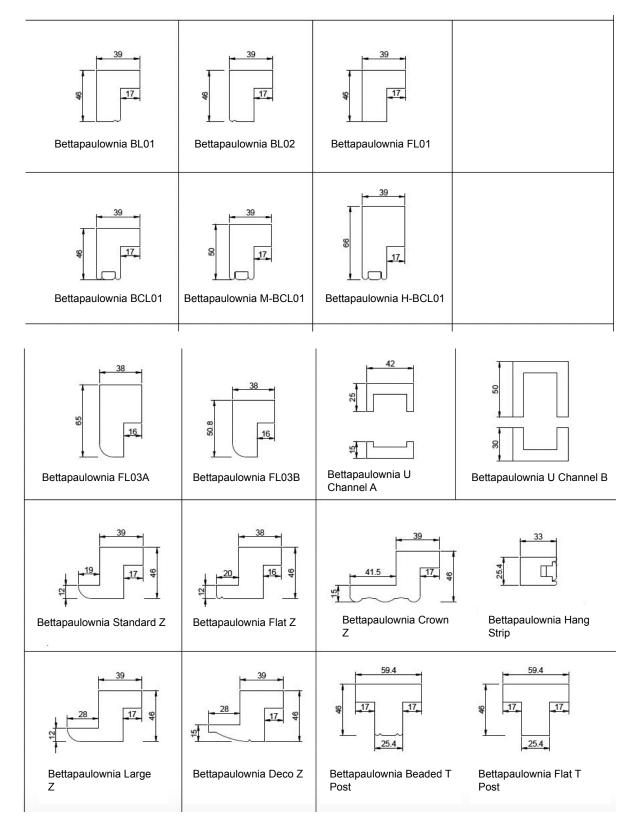

Shutter Imported Timber Stiles

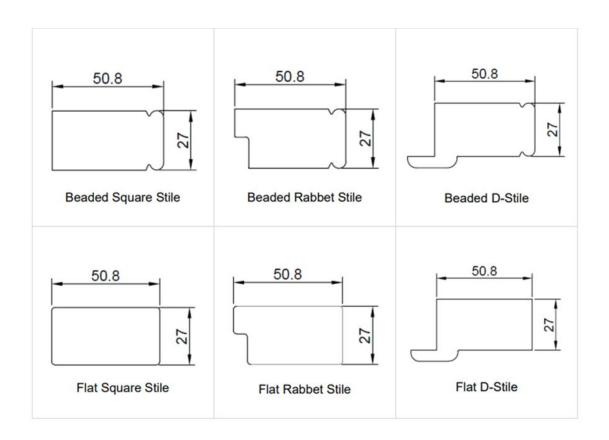

Betta Basswood Louvres

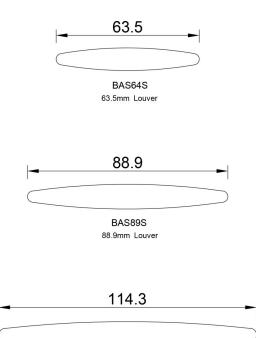

BAS114S

114.3mm Louver




Clearances & Tracking Systems

IMPORTANT NOTE


When measuring for outside mount track systems, the order size is to the <u>outside</u> of the side boards and the <u>top</u> of the head board!

i.e. If you have measured from architrave to architrave and floor to top of architrave. Unless you are fitting directly on to the architrave, you need to add the following to your dimensions:


80mm to your architrave width and 40mm to height!

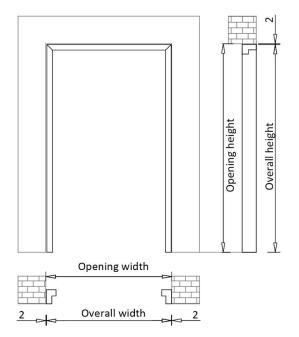


Frame type:	L shaped frame	Frame sides:	3LRT
Hardware:	/	Installation:	Mount in
Overall height:	= Opening height-2		
Overall width:	= Opening width -2-2		

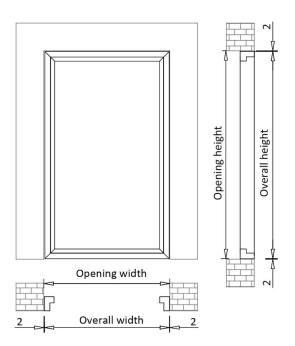


Frame type:	L shaped frame	Frame sides:	4LRTB
Hardware:	/	Installation:	Mount in
Overall height:	= Opening height-2-2		
Overall width:	= Opening width -2-2		

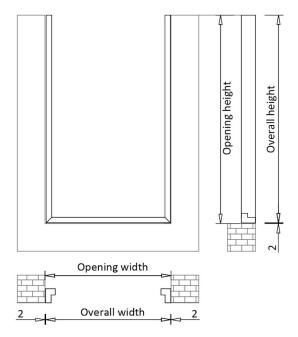


Frame type:	L shaped frame	Frame sides:	3LRB
Hardware:	/	Installation:	Mount in
Overall height:	= Opening height-2		
Overall width:	= Opening width -2-2		

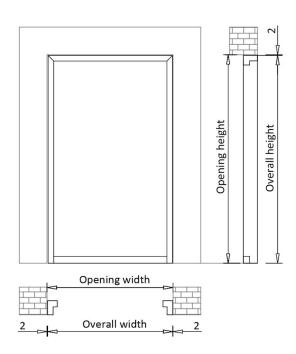


Frame type:	L shaped frame	Frame sides:	4LRTS
Hardware:	/	Installation:	Mount in
Overall height:	= Opening height-2		
Overall width:	= Opening width -2-2		

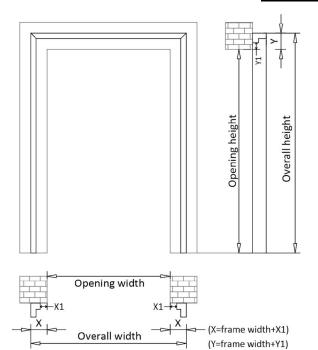


Frame type:	L shaped frame	Frame sides:	3LRT
Hardware:	/	Installation:	Mount out
Overall height:	= Opening height+Y		
Overall width:	= Opening width +X+X		

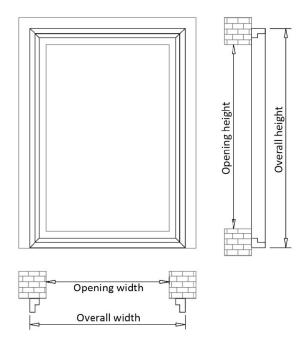


Frame type:	L shaped frame	Frame sides:	4LRTB
Hardware:	/	Installation:	Mount out
Overall height:	= Opening height+Y+Y		
Overall width:	= Opening width +X+X		

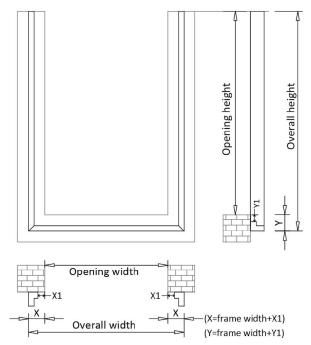


Frame type:	L shaped frame	Frame sides:	3LRB
Hardware:	/	Installation:	Mount out
Overall height:	= Opening height+Y		
Overall width:	= Opening width +X+X		

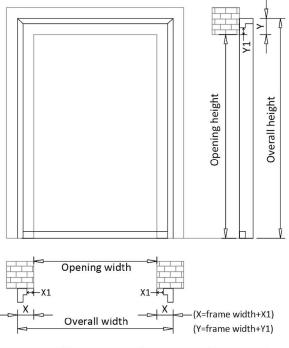


Frame type:	L shaped frame	Frame sides:	4LRTS
Hardware:	/	Installation:	Mount out
Overall height:	= Opening height+Y		
Overall width:	= Opening width +X+X		

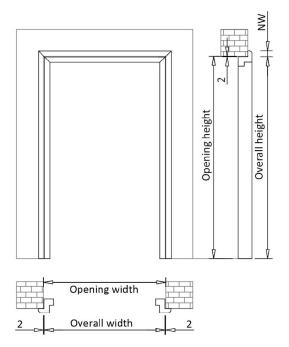


Frame type:	Z shaped frame	Frame sides:	3LRT	
Hardware:	/	Installation:	Mount in	
Overall height:	ght: = Opening height-2			
Overall width: = Opening width -2-2				
Please note the nose width (NW) outside the wall				

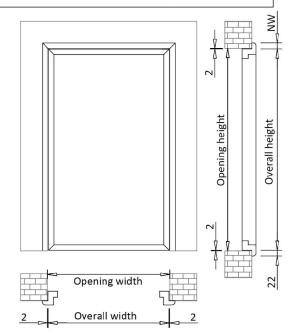


Frame type:	Z shaped frame	Frame sides:	4LRTB
Hardware:	/	Installation:	Mount in
Overall height:	= Opening height-2-2		
Overall width: = Opening width -2-2			
Please note the nose width (NW) outside the wall			

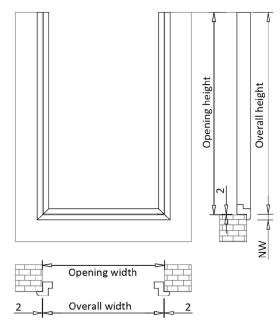



Frame type:	Z shaped frame	Frame sides:	3LRB
Hardware:	/	Installation:	Mount in
Overall height: = Opening height-2			
Overall width: = Opening width -2-2			
Please note the nose width (NW) outside the wall			

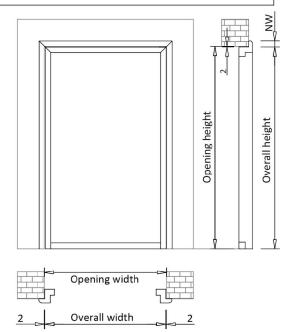


Frame type:	Z shaped frame	Frame sides:	4LRTS
Hardware:	/	Installation:	Mount in
Overall height:	= Opening height-2		
Overall width: = Opening width -2-2			
Please note the nose width (NW) outside the wall			

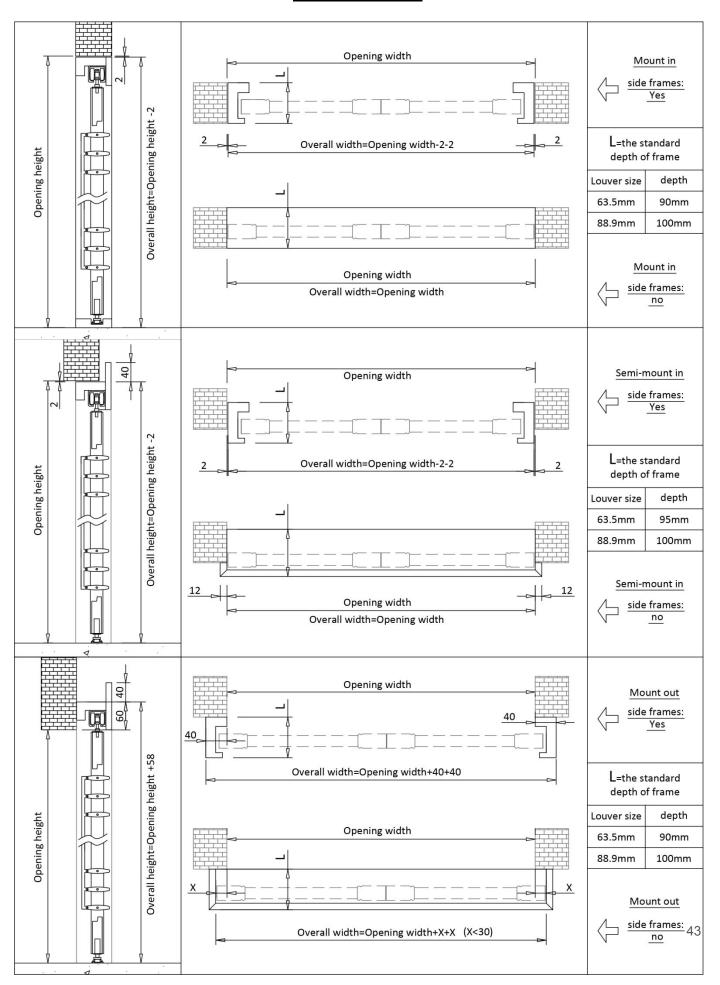


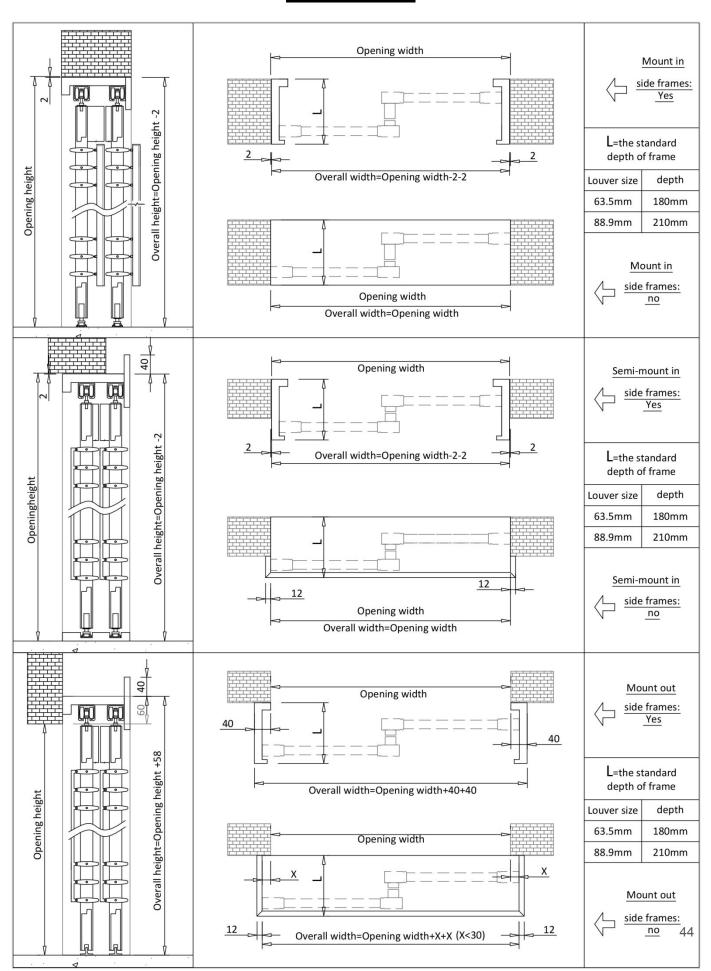

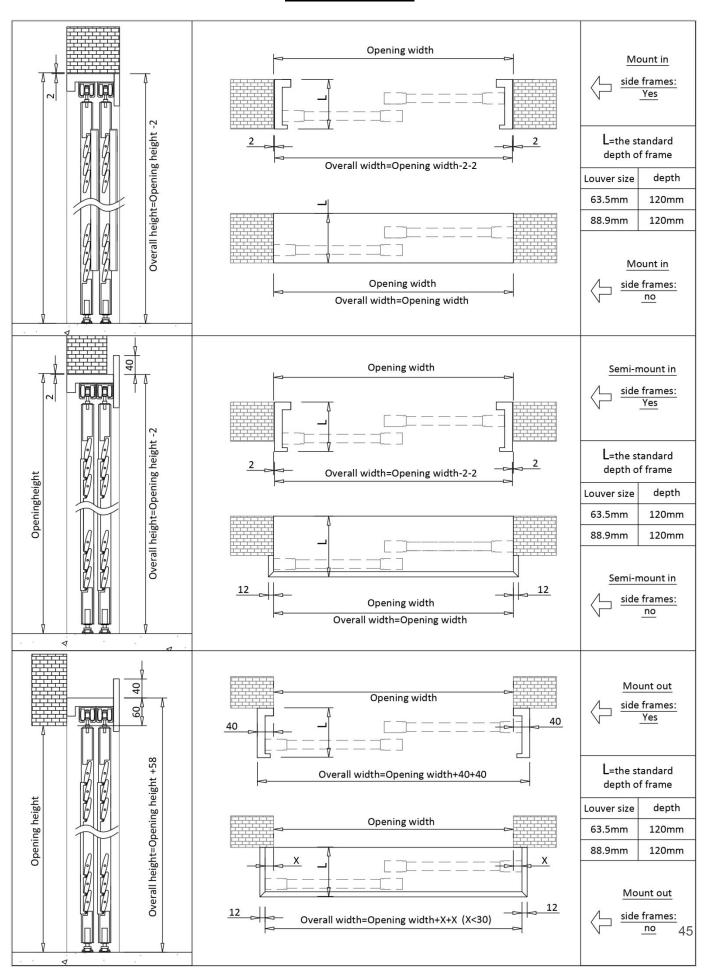


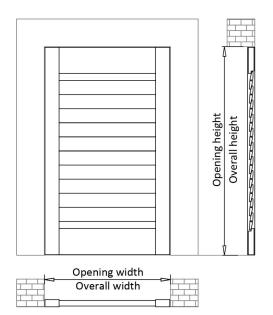


Frame type:	No frame	Frame sides:	None		
Hardware:	None Installation: I		None Installation: Moun		Mount in
Overall height:	= Opening height				
Overall width:	= Opening width				

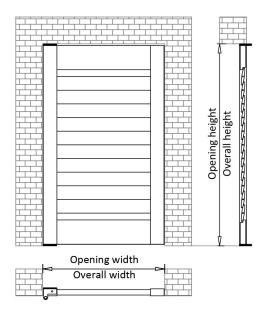

Frame type:	None	Frame sides:	None
Hardware:	Inside mounted pivot	Installation:	Mount in
Overall height:	= Opening height		
Overall width:	= Opening width		

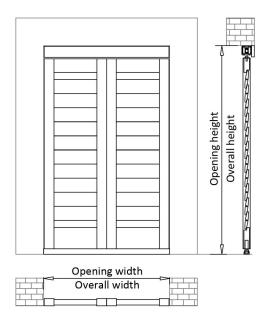



Frame type:	None	Frame sides:	None
Hardware:	Track system	Installation:	Mount in
Overall height: = Opening height			
Overall width:	= Opening width		

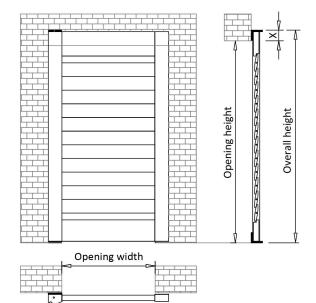


Frame type:	None	Frame sides:	None
Hardware:	outside mounted pivot	Installation:	Mount out
Overall height:	= Opening height+X		
Overall width:	= Opening width +Y+Z		

Overall width

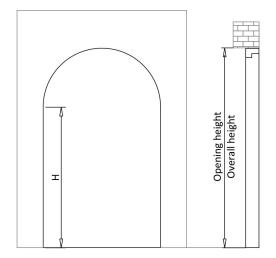






Frame type:	L shaped frame	Frame sides:	/
Hardware:	/	Installation:	Mount in
Overall height:	= Opening height		
Overall width:	= Opening width		

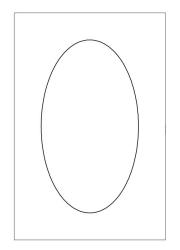


Opening height Overall height




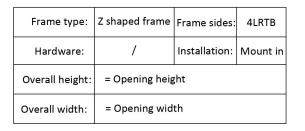


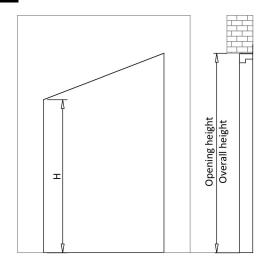



Frame type:	L shaped frame	Frame sides:	/
Hardware:	/	Installation:	Mount in
Overall height:	= Opening height		
Overall width:	= Opening width		

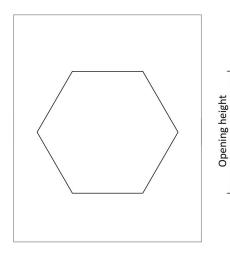




Frame type:	Z shaped frame	Frame sides:	4LRTB
Hardware:	/	Installation:	Mount in
Overall height:	= Opening height		
Overall width:	= Opening width		

Overall height


Frames for Track System

The frames used for track system only available for 63.5mm and 88.9mm louver sizes. We will match the corresponding frame depth shown in the table according to the louver size you choose. If you prefer a different frame depth please write down the required depth on the order form. Please note the frame depths shown in the table are the minimum depths that ensure the panels open or slide freely on the tracks, which are regarded as the standard frame depths.

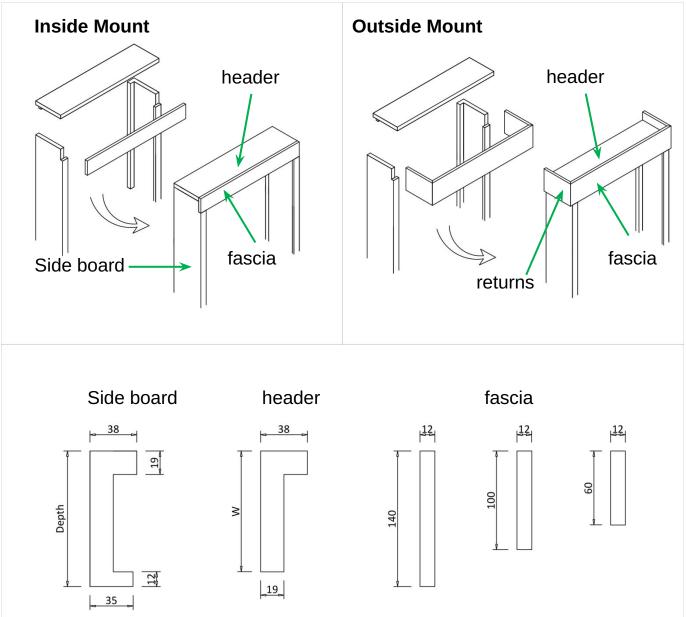


Bi-fold Track System

Inside Mount

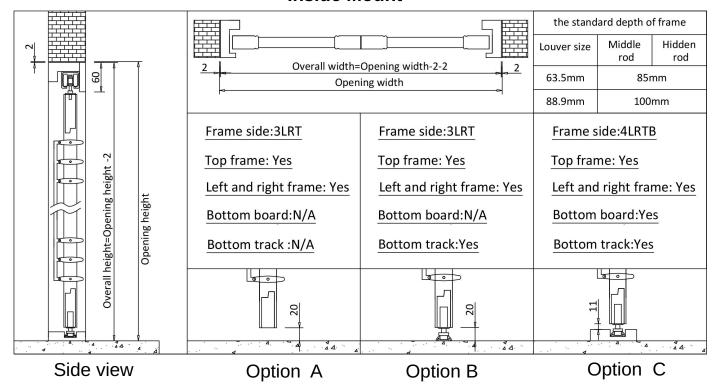


Outside Mount

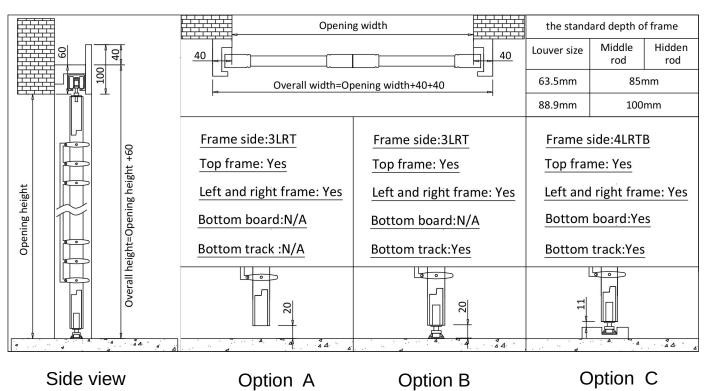


Sliding Track System (louver open)


Inside Mount

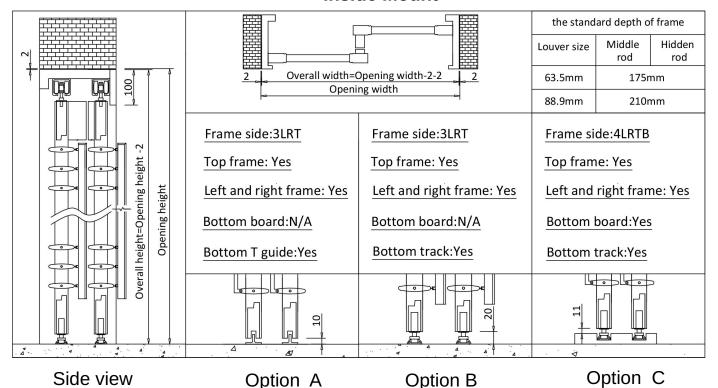


Outside

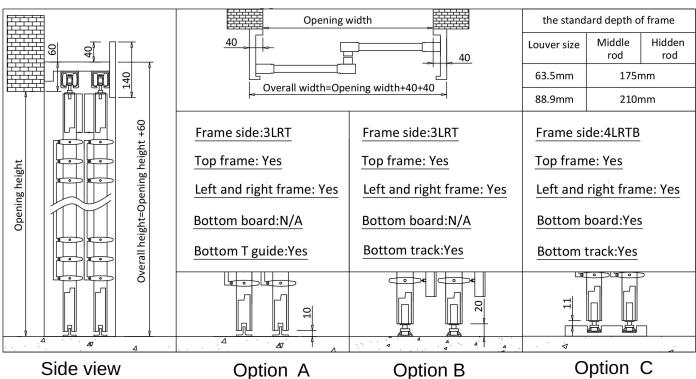


Sliding Track System (light block)

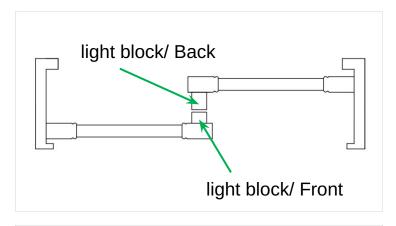

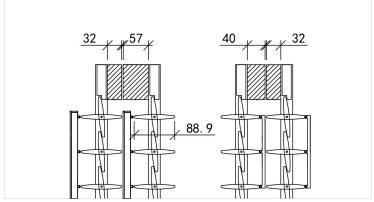


Louver type:	Rod type	Rod type
88. 9mm	Middle Rod	Hidden Rod
Light Block's width(F):	32mm	40mm
Light Block's width(B):	57mm	32mm

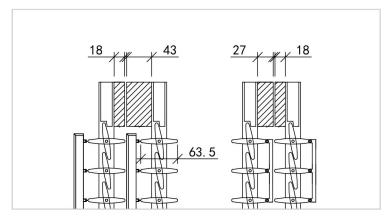


Louver type:	Rod type	Rod type
63. 5mm	Middle Rod	Hidden Rod
Light Block's width(F):	18mm	27mm
Light Block's width(B):	43mm	18mm

Sliding Track System (louver closed)

Inside Mount

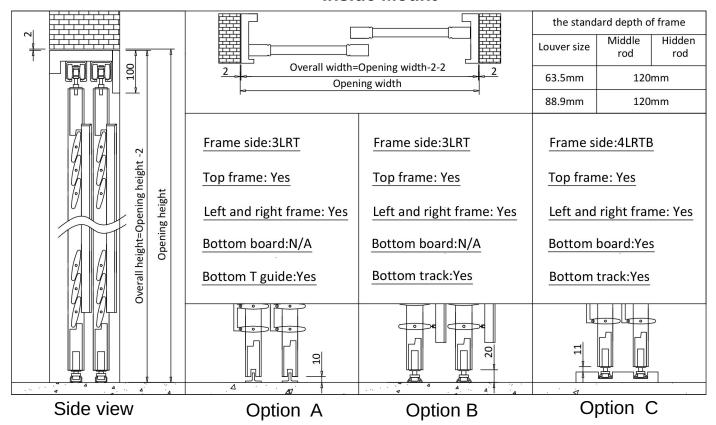


Outside Mount

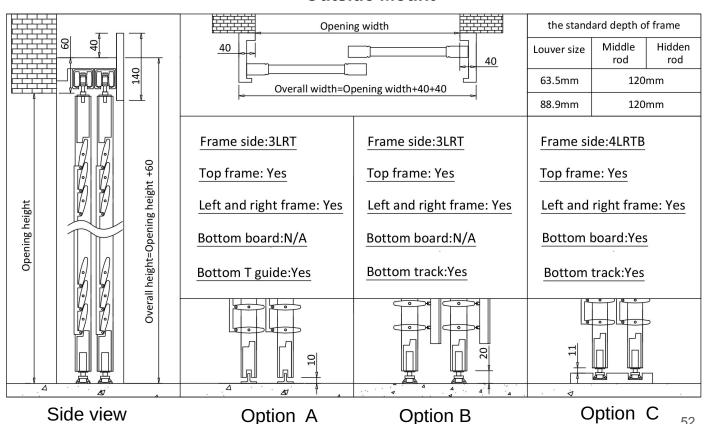



Staggered Centre Tilt Rod


When more than three panels are folded at one side, the centre tilt rod will be staggered to avoid damage.

The middle rods of all the panels will be automatically staggered by 7mm to the same direction to avoid any collision.



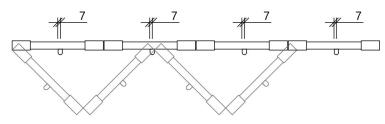



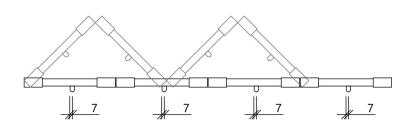


Height of Divider Rail

For Full Height Shutters


When the mount type is "Inside", measurement starts from bottom of the opening to the center point of each divider.(same for all inside mount frames, such as L frames, Z frames. If only 1 divider is required, see H1 on drawing 1 and drawing 2.If two dividers are required, see H1,H2 on drawing 4 and drawing 5.)

When the mount type is "Outside", Measurement starts from bottom of the frame to the center point of each divider. (same for all outside mount frames, such as L frames. If only 1 divider is available, see H1 on drawing 3.If two dividers are required, see H1,H2 on drawing6.)

1 divider(1-3)

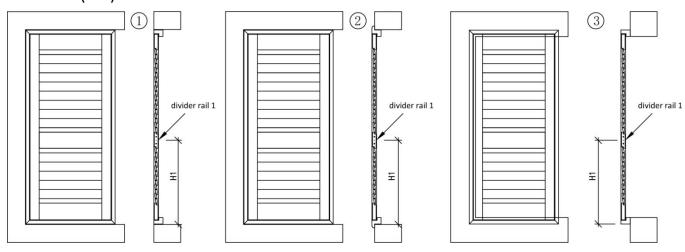

2 dividers(4-6)

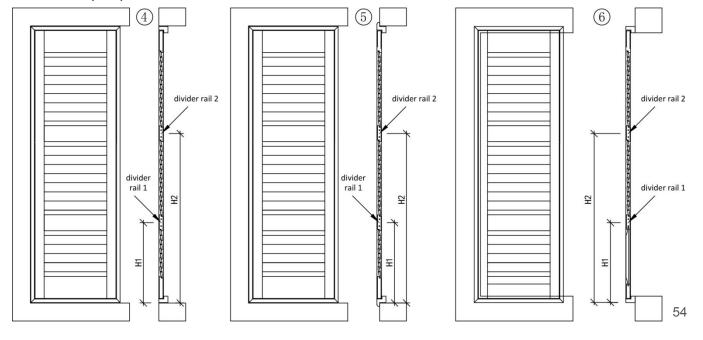


Height of Divider Rail

Tier on Tier Shutters


Please note <u>if no horizontal T post</u>, the break between top and bottom panels should always be filled in the column of "Divider-1" on the order form. If the mount type is inside, the break should be measured from the top of the bottom panels till the bottom of the opening. If the mount type is outside, the break should be measured from the top of the bottom panels to the bottom of the frame.

When using a horizontal T post. The divider is measured from the bottom of the opening or frame to the center point of the T post.

No horizontal T post (1-3)

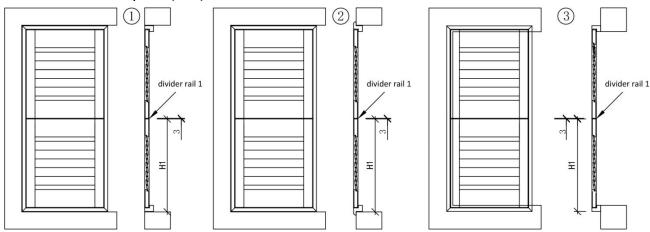


With horizontal T post(4-6)

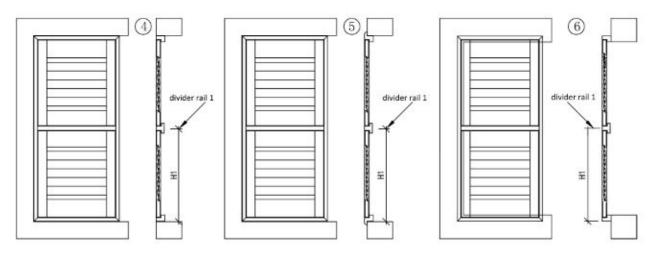

Rod Split


Split tilt rod measurement: From the bottom point of the overall height (the bottom of the frame or floor) to the desired split height H1. Split tilt tolerance +- ½ Louvre

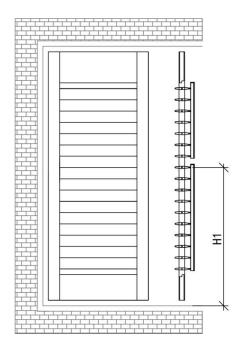

Hidden rods are split automatically when the number of louvers connected to the rod exceeds the following limits:


Louver size	Louver Quantity
63.5	>=20
88.9	>=13
114.3	>=10

If the louver quantity is odd, the bottom rod will be longer than the top. if the louver quantity is even, the rod will be split in half.

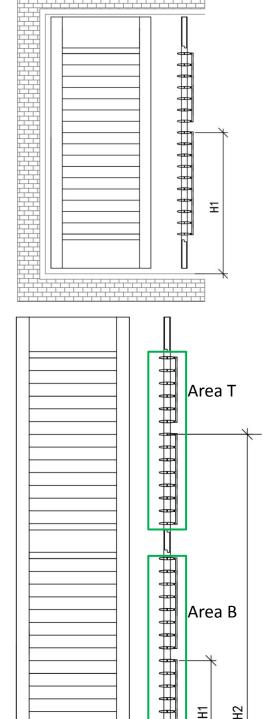


Stiles






Config: L - DR D-mould stile

Stile type	Level
Butt stile	1
D-mould stile	2
Rebate stile	3




Config: LL / RR Rebate stile



Config: LLRR / LLLL / RRRR

Rebate stile




Config:LL - DRR Rebate stile

Fixed Louvers

Fixed louvers mean the louvers cannot move and no rod exists. The fixed louvers could be opened to a certain degree, but normally not exceeds the stile.

Drawing B is the standard (louvres closed).

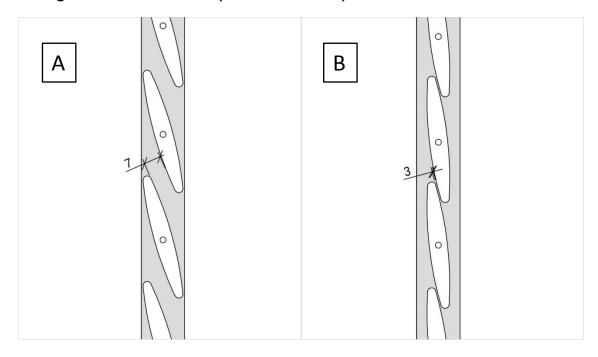

Drawing A:The fixed louvers are opened with certain degree

Drawing B:The fixed louvers are fully closed without any degree




Hardware

Hinges



Non-mortise hinge 75mm



Rebate hinge 75mm



Non-mortise hinge 62mm



Rebate hinge 62mm



Inside pivot 3mm rebate



Outside pivot 6mm rebate



L shaped hinge 75mm



L- shaped Clearview

We've aimed to include the necessary technical information in this manual.

How to measure, how to correctly select the options from the drop-down box on the order form and how to avoid order mistakes.

The purpose of this manual is to help distributors easily understand our specifications and ordering system.

If you need any help please make contact with one of our support team.

We are constantly updating and improving so we appreciate any further suggestions from you.

https://www.betta-blinds.com.au